



HOW TO FIT POLARIS TOP PULL LATCH (800 SERIES)

GLASS TO GLASS FOR 8-12mm FRAMELESS GLASS

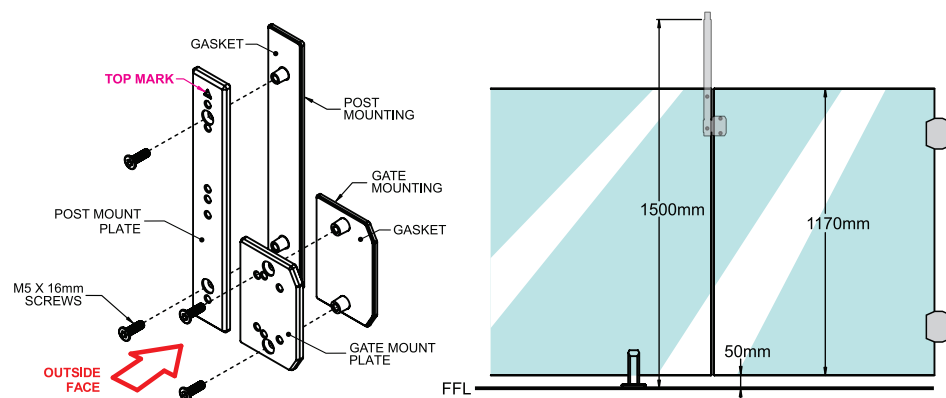


1. Unpack the latch mounts and the Top pull latch from their packaging.
2. Check which side of the glass fence you are installing the Top pull Latch.

TOP VIEW

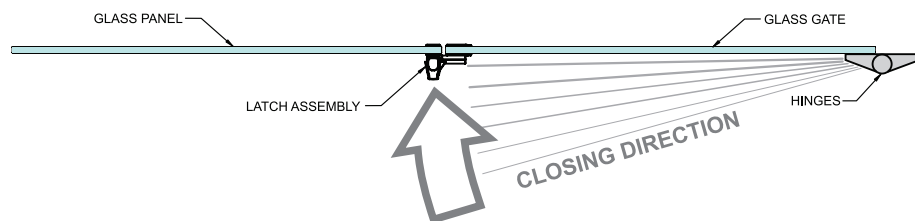


3. Position the Polaris latch mount castings into the glass panel holes and ensure the **TOP MARK** is pointing up. Secure them onto the glass with the M5 x 16mm CSK screws.
4. The Top latch requires its plastic mounting brackets to have their 'side tabs' removed [We recommend using a sanding flap wheel on a grinder for a neat flush finish].

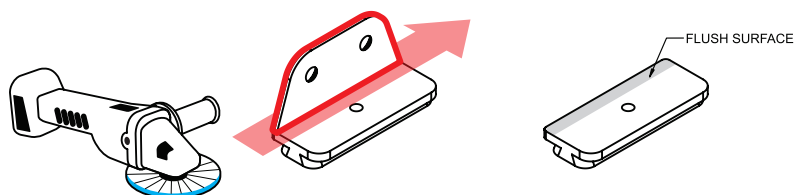


5. The latch mounting faces can take both a Nationwide Trident or a D&D Magnalatch. Use the provided M4 x 8mm Dome head screws for the Nationwide Trident and the M4 x 10mm CSK head screws for the D&D Magnalatch. Consult the below diagrams to determine which screw holes to use.


NATIONWIDE TRIDENT

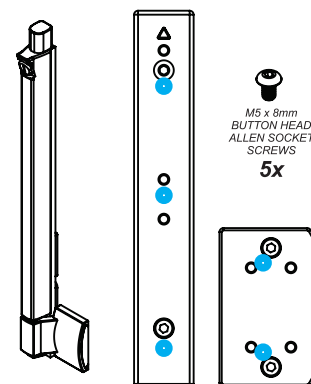

D&D MAGNALATCH

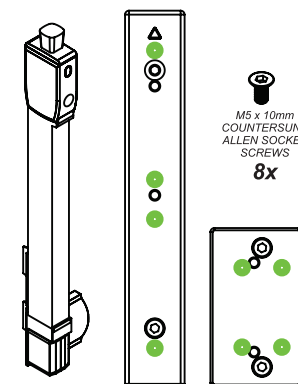

6. Follow the Top pull manufacturers instructions to ensure the latch is aligned and adjusted as intended for proper use

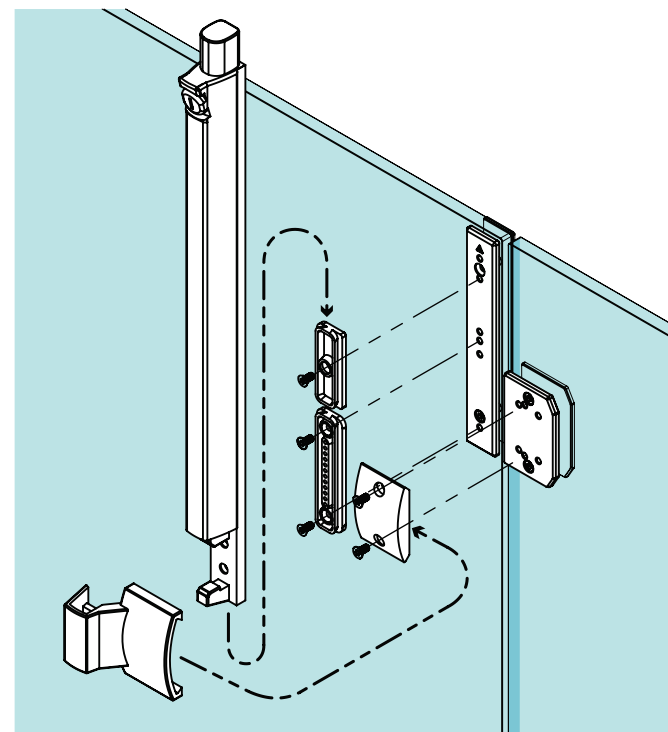

POLARIS SOFT CLOSE HINGE IS AN AUSTRALIA DESIGN AWARD™ WINNER – Glass Hardware Australia

WWW.POLARISHINGE.COM.AU – INFO@POLARISHINGE.COM